

Izaberite
"Kontroler"

VRF system

File Preference Tool Help Update District: Europe

VRF system Controller Etc Address View Output Menu

Make VRF Sys.

Unregistered list

No	Series	Name	Model	Number of indoor Count
VRF 1 Outdoor 3/100 Indoor 15/400				
Outdoor	3	Lon convertor		0
Indoor	15	Network convertor		1
RB UNIT	12	etc 登録 - Signal Amplifier		0
VRF 2 Outdoor 2/100 Indoor 15/128				
Outdoor	2	Lon convertor		1
Indoor	15	Network convertor		0
RB UNIT	12	etc 登録 - Signal Amplifier		0



Ekran kontrolera

Controller

File Preference Tool Help Update District: Europe

VRF system Controller Etc Address View Output Menu

Controller

	Controller Name	Abbreviation	Model	Done	Caution	ALL
<input type="radio"/>	System Controller	SC	UTY-APGX	0	0	0
<input type="radio"/>	System Controller Lite	SCL	UTY-ALGX	0	0	0
<input type="radio"/>	Touch Panel Controller	TP	UTY-DTGY	0	0	0
<input type="radio"/>	Touch Panel Controller(internet ac)	TPZ	UTY-DTGYZ1	0	0	0
<input checked="" type="radio"/>	Central Controller	CR	UTY-DCGY	0	0	0
<input type="radio"/>	Group Remote Controller	GR	UTY-CGGY	0	0	0

Select indoor Controller

VRF System	No	Outdoor	OutdoorModel	No	Indoor	IndoorModel	Floor	Room	Comment	SC	SCL	TP	TPZ	CR	GR
1	1	Otdr1	AJY288LALBH	1	Indr1	AUXD18GALH									
				2	Indr2	AUXD18GALH									
				3	Indr3	AUXD18GALH									
				4	Indr4	AUXD18GALH									
				5	Indr5	AUXD18GALH									
				6	Indr6	AUXD18GALH									
				7	Indr7	AUXD18GALH									
				8	Indr8	AUXD18GALH									
				9	Indr9	AUXD18GALH									
				10	Indr10	AUXD18GALH									
				11	Indr11	AUXD18GALH									
				12	Indr12	AUXD18GALH									
				13	Indr13	AUXD18GALH									
				14	Indr14	AUXD18GALH									

Lista kontrolera(od marta 2017)

- 1.Sistem kontroler
- 2.Sistem kontroler Lite
- 3.Touch Panel Controller
- 4.Touch Panel Controller(Pristup internetu)
- 5.Centalni kontroler
- 6.Grupni daljinski upravljač

Idite na ekran za podešavanje kontrolera

Svi uslovi kontrolera
Potvrdite broj kontrolera za svaku unutrašnju
jedinicu

The screenshot shows the 'Controller' software interface. At the top, there's a menu bar with 'File', 'Preference', 'Tool', 'Help', and 'Update'. Below it, a toolbar contains buttons for 'VRF system', 'Controller', 'Etc', 'Address', 'View', 'Output', and 'Menu'. The 'Controller' button is highlighted. The main area is titled 'Controller' and contains two tables.

The first table, 'Controller', lists various controller types with their abbreviations, models, and counts. The 'Group Remote Controller' is selected.


	Controller Name	Abbreviation	Model	Done	Caution	ALL
<input type="radio"/>	System Controller	SC	UTY-APGX	1	0	1
<input type="radio"/>	System Controller Lite	SCL	UTY-ALGX	0	0	0
<input type="radio"/>	Touch Panel Controller	TP	UTY-DTGY	2	0	2
<input type="radio"/>	Touch Panel Controller(internet ac)	TPZ	UTY-DTGYZ1	0	0	0
<input type="radio"/>	Central Controller	CR	UTY-DCGY	0	0	0
<input checked="" type="radio"/>	Group Remote Controller	GR	UTY-CGGY	1	0	1

A 'Select indoor Controller' button is located to the right of this table.

The second table, 'VRF System', shows a detailed configuration for a specific system (No. 1, Outdoor Model AJY288LALBH). It lists 14 indoor units (Indr1 to Indr14) and their corresponding controller settings.

VRF System	No	Outdoor	OutdoorModel	No	Indoor	IndoorModel	Floor	Room	Comment	Controller					
										SC	SCL	TP	TPZ	CR	GR
1	1	Otdr1	AJY288LALBH	1	Indr1	AUXD18GALH				1		1			
				2	Indr2	AUXD18GALH				1		1			
				3	Indr3	AUXD18GALH				1		1			
				4	Indr4	AUXD18GALH				1		1			
				5	Indr5	AUXD18GALH				1		1			
				6	Indr6	AUXD18GALH				1		1			
				7	Indr7	AUXD18GALH				1		1			
				8	Indr8	AUXD18GALH				1		1			
				9	Indr9	AUXD18GALH				1		1			
				10	Indr10	AUXD18GALH				1		1			
				11	Indr11	AUXD18GALH				1		1			
				12	Indr12	AUXD18GALH				1		1			
				13	Indr13	AUXD18GALH				1		1			
				14	Indr14	AUXD18GALH				1		1			

Kontroler –Sistemi kontroler, Sistemi kontroler LiteControl design

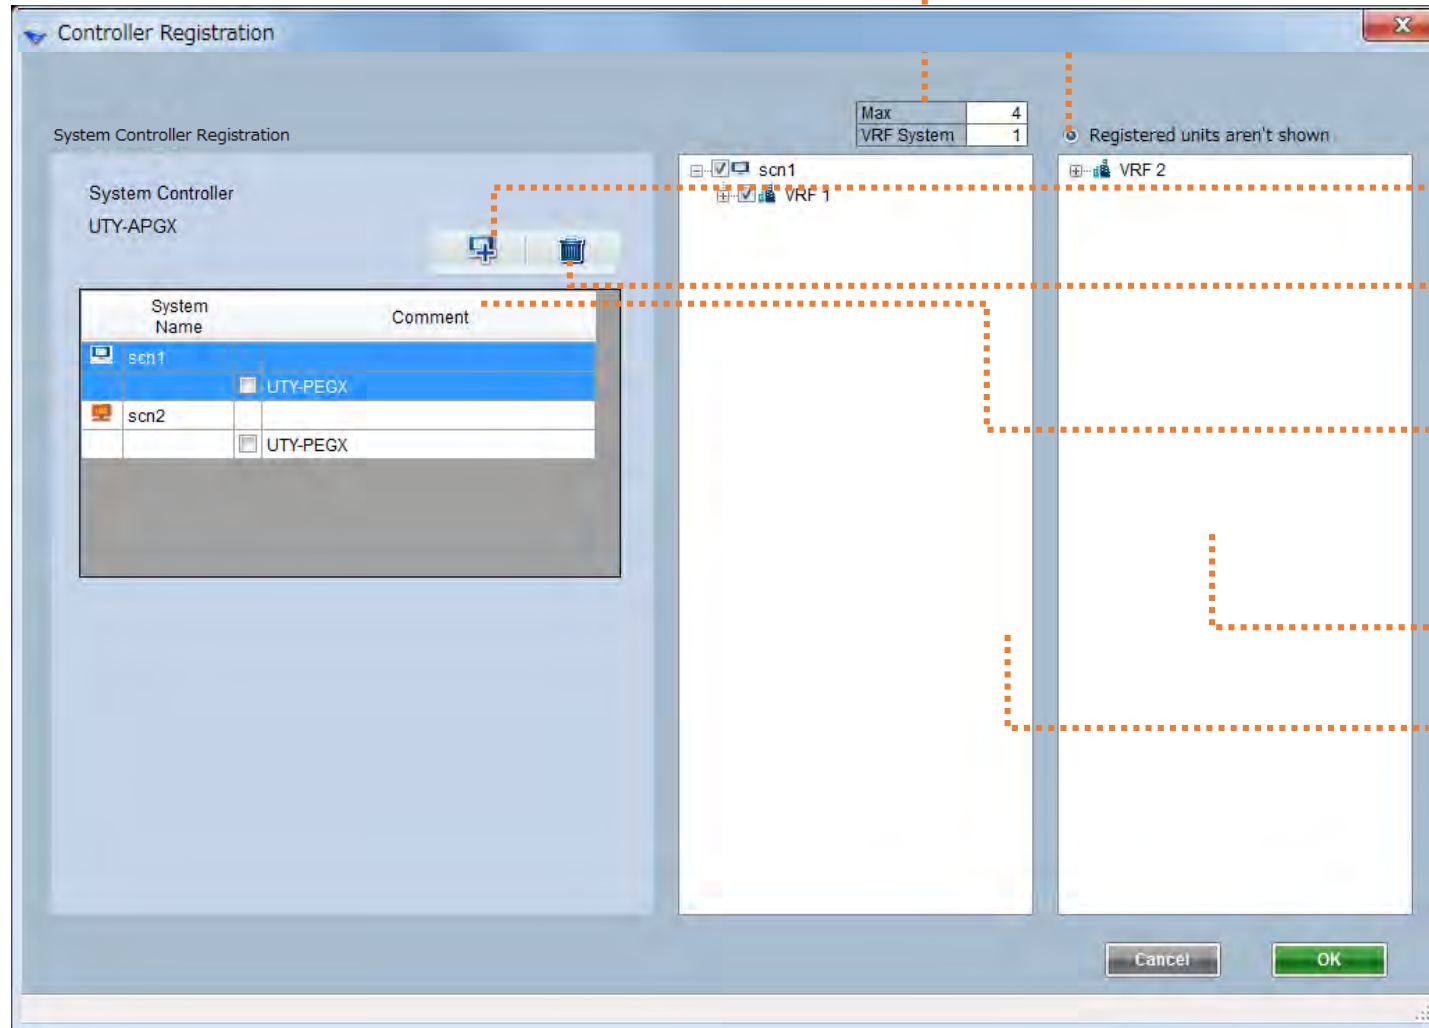

Uslovi sistemskog kontrolera

Izabrane jedinice nisu prikazane
Izabrane jedinice se ne prikazuju čekiranjem

Dodajte sistemski kontroler

Izbrišite sistemski kontroler

Lista sistemskog kontrolera i dodajte opciju
Opcija je dodata


Ikona boja : Normalna

Ikona boja : Upozorenje


Ikona boja : Greška

Lista neizabranih jedinica

Lista izabranih jedinica

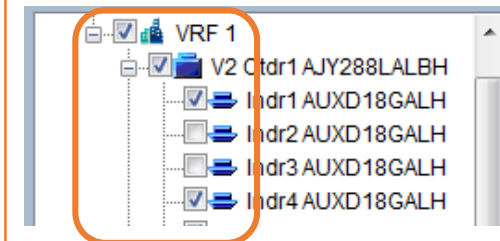

Svaki sistem
rashalbnog fluida i
unutrašnje jedinice
mogu biti izabrani za
kontrolu

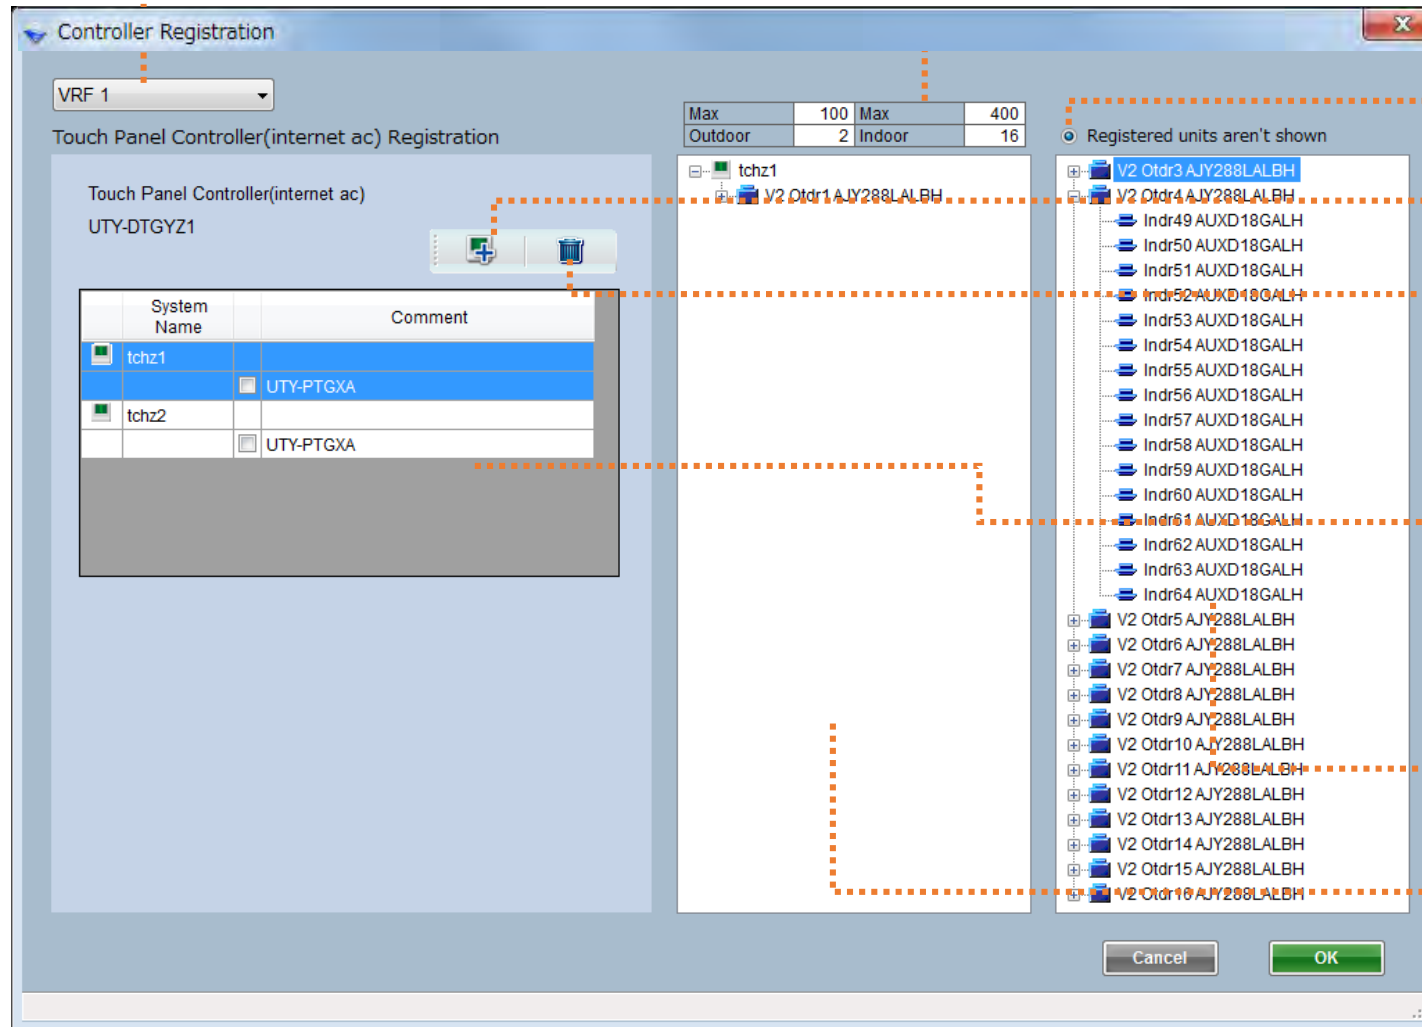

Izaberite VRF Sistem

Uslovi Touch/Centralni Kontrolera

Izabrane jedinice nisu prikazane

Dodajte Touch/Centralni Kontroler

Izbrišite Touch/ Centralni Kontroler

Touch/ Centralni Kontroler lista i dodavanje opcije

Opcija je dodata biranjem (čekiranjem)

Ikona boja : Normalna


Ikona boja : Upozorenje

Ikona boja : Greška

Lista neizabranih jedinica

Svaki sistem rashladnog fluida i unutrašnje jedinice mogu biti izabrani

Lista izabranih jedinica

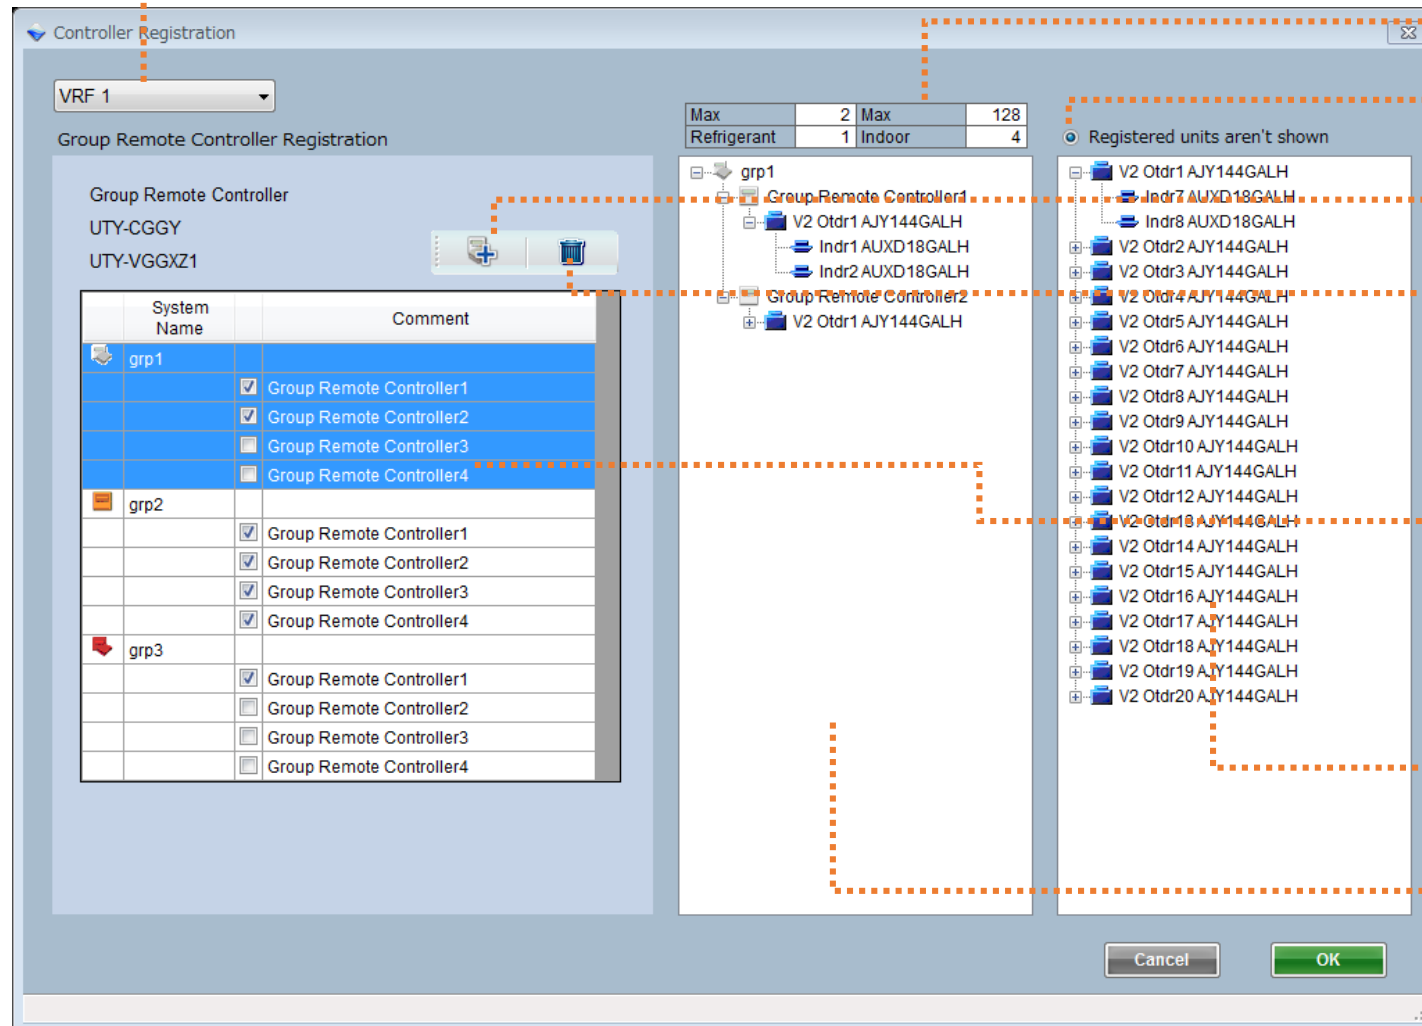

Izaberite VRF Sistem

Uslovi za podešavanje seta grupnog daljinskog upravljača

Izabrane jedinice nisu prikazane

Dodajte set grupnog daljinskog upravljača

Izbrišite set grupnog daljinskog upravljača

Lista seta grupnog daljinskog upravljača
Grupni daljinski upravljač se dodaje čekiranjem
Ikona boja : Normalna

Ikona boja : Upozorenje

Ikona boja : Greška

Lista neizabranih jedinica
Svaki sistem rashladnog fluida i unutrašnje jedinice mogu biti izabrani

Lista izabranih jedinica